

search their website at www.dnr.state.oh.us/water/maptechs/wellogs/app/, or contact ODNR, Division of Water at (614) 265-6740. The total depth of the well will be recorded at the right side of the well log, and the static water level will be recorded under the well test section of the well log. Subtract the static water level from the total depth of the well to determine the total feet of water held in the well casing.

Step 3. Determine the volume of chlorine to use for disinfection

Once the total feet of water stored in the casing is known, then the volume of water stored in the casing can be calculated based on Table 1. Take the total feet of water stored in the well, and based on the well diameter, multiply the total feet times the appropriate gallons per foot of water.


Example:

Total well depth is 100 feet, static water level is 60 feet, well casing diameter is 5 inches.

100 feet – 60 feet (static water level) = 40 feet of water in the well casing

From Table 1, a 5 inch casing has 1 gallon stored per foot.

40 feet of water in the casing x 1 gallon per foot = 40 gallons volume of water in casing

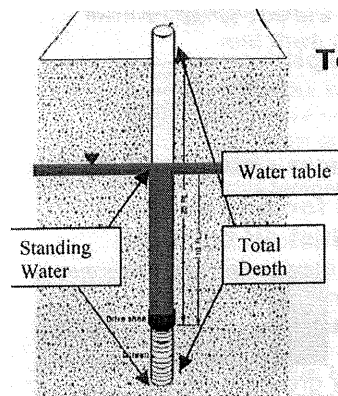


Diameter of well (inches)	Gallons per foot of water
3	0.37
4	0.65
5	1.0
6	1.5
8	2.6

The total volume of chlorine to be used for disinfection can be calculated based on the Table 2. For the example cited above (40 gallons of water in the well casing), use approximately one-half of the amount of chlorine necessary to disinfect 100 gallons.

Chlorine concentration (parts per million)	Gallons of 5.25% sodium hypochlorite - liquid bleach	Pounds of dry calcium hypochlorite	Minimum contact time
250	0.5 gallons	0.38	8 hours
500 ppm	1 gallons	0.75 pounds	8 hours

If the total volume of water stored in the well casing is unknown, add one gallon of fresh 5.25 % unscented laundry bleach, also called sodium hypochlorite, to five gallons of water. Mix the solution in a new clean garbage can, or clean and line a garbage can with a new plastic garbage bag. Laundry bleach loses its' effectiveness the longer it sits on the shelf in the store or in your home. Solid chlorine pellets, which are 65% to 70% calcium hypochlorite, should be dissolved in five gallons of water. Use only

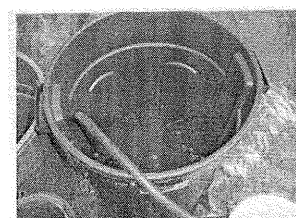

chlorine pellet products intended for water well disinfection. Do not use solid chlorine products used for swimming pools because they may contain additional chemicals, such as algaecides.

Step 4. Add vinegar to the chlorine solution.

To lower the pH for better disinfection add about three parts of white vinegar (for each part chlorine needed) to the five gallon solution of chlorine and water.



Step 5. Add the chlorine / vinegar solution to the well


Remove the cap from the well. Place the can next to the well to pour the solution or siphon the chlorine /vinegar solution from the can directly into the well.

Step 6. Flush and re-circulate.

By-pass all water treatment units during the chlorination process to avoid damage to the resin bed. The resin bed of the water softener can provide a place for bacteria to grow, and must be chlorinated at lower concentrations. The water softener should be disinfected separately using $\frac{1}{4}$ to $\frac{1}{2}$ cup of chlorine bleach placed into the small fill tube in the large brine tank followed by a manual recharge. Remove and discard any carbon filters or cartridge filter elements and thoroughly clean the inside of the filter housing.

With a garden hose, re-circulate this solution back into the well washing down the sides of the casing for approximately ten minutes. Debris may begin to slough off the side of the casing, and iron or manganese in the water may begin to turn solid as the chlorine reacts with the minerals.

Turn on **all** faucets connected to the well throughout the house and outside the house, including the hot water faucets. Make sure to turn on faucets that rarely or never get used, especially yard hydrants and outside spigots. Remember to run water into the washing machine and flush all toilets. Run the water until the chlorine smell is detected.

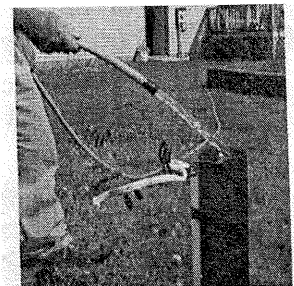

Step 7. Maintain sufficient contact time.

Once the odor of chlorine is detected in all water lines, shut off the faucets and let the water sit in the plumbing for 8 to 24 hours.

Step 8. Flush the chlorine from the water system.

After sufficient contact time has elapsed, run the water to waste until the entire odor of chlorine is gone. This will take a while depending on the volume of the well and the plumbing. Do **not** run the water into your septic system as this will cause the system to become overloaded.

Step 9. Retest the well for total coliform

Wait a few days, and then contact the local health district to have another sample collected for total coliform bacteria. Make sure that the water is checked for chlorine before collecting the water sample. If there is any indication of chlorine in the water, the sample should not be collected. This helps avoid getting an indication of a safe sample that may be due only to the continuing activity of leftover chlorine and may not reflect the true condition of the water. Do not replace carbon filters or filter elements until an acceptable total coliform result has been achieved.

What if the well has unacceptable levels of total coliform after disinfection?

There are many instances where the previously described disinfection procedures may not work sufficiently in reducing the levels of bacteria in the water well. In some cases the pH of the water may need further adjustment in order to get the optimum disinfection from the added chlorine, or enhanced disinfection methods may be required. The well casing may also need a thorough scrubbing or cleaning to remove non-pathogenic slime forming or iron bacteria that can build up on the well casing and borehole walls. Removal of this type of bacteria often requires the use of specially formulated well cleaning products and drilling equipment and is best performed by a registered contractor. If total coliform levels persist above four colony forming units (CFUs), if *E. coli* bacteria persist in water samples, or the condition and stability of the well is questionable, then contact an experienced registered private water systems contractor to professionally disinfect your well. Contact your local health district when you experience any problems with your well or for additional assistance.

The Ohio Department of Health registers and bonds private water systems contractors. Please contact your local health district or check <http://www.odh.ohio.gov/odhPrograms/eh/water/PWSreg.aspx> for the most current list of registered contractors and other information.

Residential Water and Sewage Program
Bureau of Environmental Health
Ohio Department of Health
246 N. High St.
Columbus, Ohio 43266-0118
(614)466-1390
<http://www.odh.ohio.gov/odhPrograms/eh/water/water1.aspx>

Questions? Send E-mails to BEH@odh.ohio.gov